CAMO LEVER

How To Use the *LEVER*[™]

HOW TO ASSEMBLE

 




A - Straighten the handle.

B - Align both holes by rotating the board cam.







Use supplied hex key to securely tighten the screw.



GRAND RAPIDS, MI 49519

ര

LOCK-IN GROOVED BOARDS & CLIPS



CAMO[®] LEVER[®]

- A Loosen joist knob until the stop block disengages.
- B Rotate block so the word on the side facing the joist cam matches the joist material.

SET THE JOIST WIDTH





Adjust the stop block to the proper joist width and tighten the knob.



Place LEVER on the joist and tighten the joist cam with the Pivot Pin.

LOCK-IN



Apply pressure by moving the handle towards the deck board. **Do not over-tighten** as the boards can buckle.

FASTEN



Leave LEVER in place until all clips are fastened.

ົ



Release pressure by moving the handle away from the deck board.



Loosen the joist cam and remove LEVER.

Ю



CAMO[®] LEVER[™]

How To Use the *LEVER*[™]

STRAIGHTEN WARPED BOARDS



- A Loosen joist knob until the stop block disengages.
- B Rotate block so the word on the side facing the joist cam matches the joist material.

SET THE JOIST WIDTH





Adjust the stop block to the proper joist width and tighten the knob.



Place LEVER on the joist and tighten the joist cam with the Pivot Pin.





Apply pressure by moving the handle towards the deck board.



Keep turning until the board is in desired fastening position.



Leave LEVER in place until all fastening is complete.



Release pressure by moving the handle away from the deck board.



Loosen the joist cam and remove LEVER.

800-968-6245 • INFO@CAMOFASTENERS.COM • WWW.CAMOFASTENERS.COM D C f D O

CAMO[®] LEVER[®]

How To Use the *LEVER*[™]

USING ON ANGLED DECK INSTALLATIONS

LOCK-IN GROOVED BOARDS & CLIPS



Place LEVER with the board cam on the low section of the decking.



Tighten the joist cam with the Pivot Pin.



Apply pressure by moving the handle towards the deck board. **Do not over-tighten** as the boards can buckle.

Leave LEVER in place until all clips are fastened.

STRAIGHTEN WARPED BOARDS



Place LEVER with the board cam on the low section of the decking.



Tighten the joist cam with the Pivot Pin.

BEND & FASTEN



Apply pressure by moving the handle towards the deck board.

Keep turning until the board is in desired fastening position.

Leave LEVER in place until all fastening is complete.



GRAND RAPIDS, MI 49519 WWW.NATIONALNAIL.COM